
How to change the print density-EPOS80300 operation book

1. First, we power on the printer, connect it to the computer through the USB port, and install the driver. Finally, we must be able to print the test page through the computer.


2. Open the Printer Set Tool program sent by the engineer on the computer, and you will see the interface as shown in the figure below.

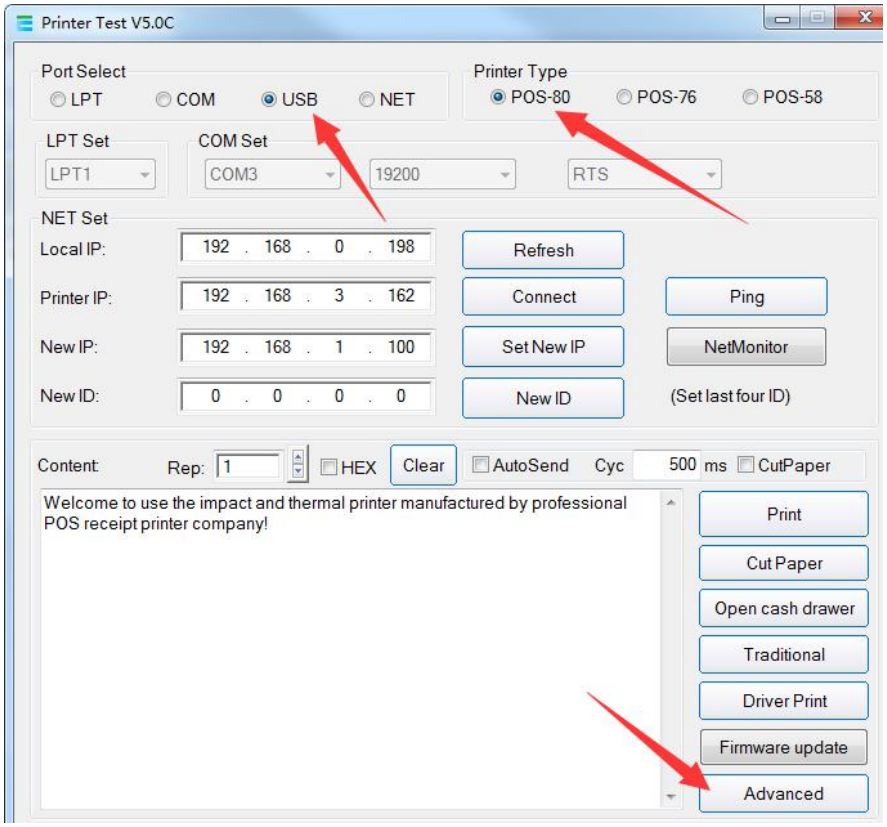



3. In the opened window, check whether the setting of the position indicated by the arrow is the same as the picture above, if it is the same, click the "Advanced" option, if it is different, you need to change

the setting, and then click: "Advanced"， After clicking the "Advanced button, you will enter the following interface。

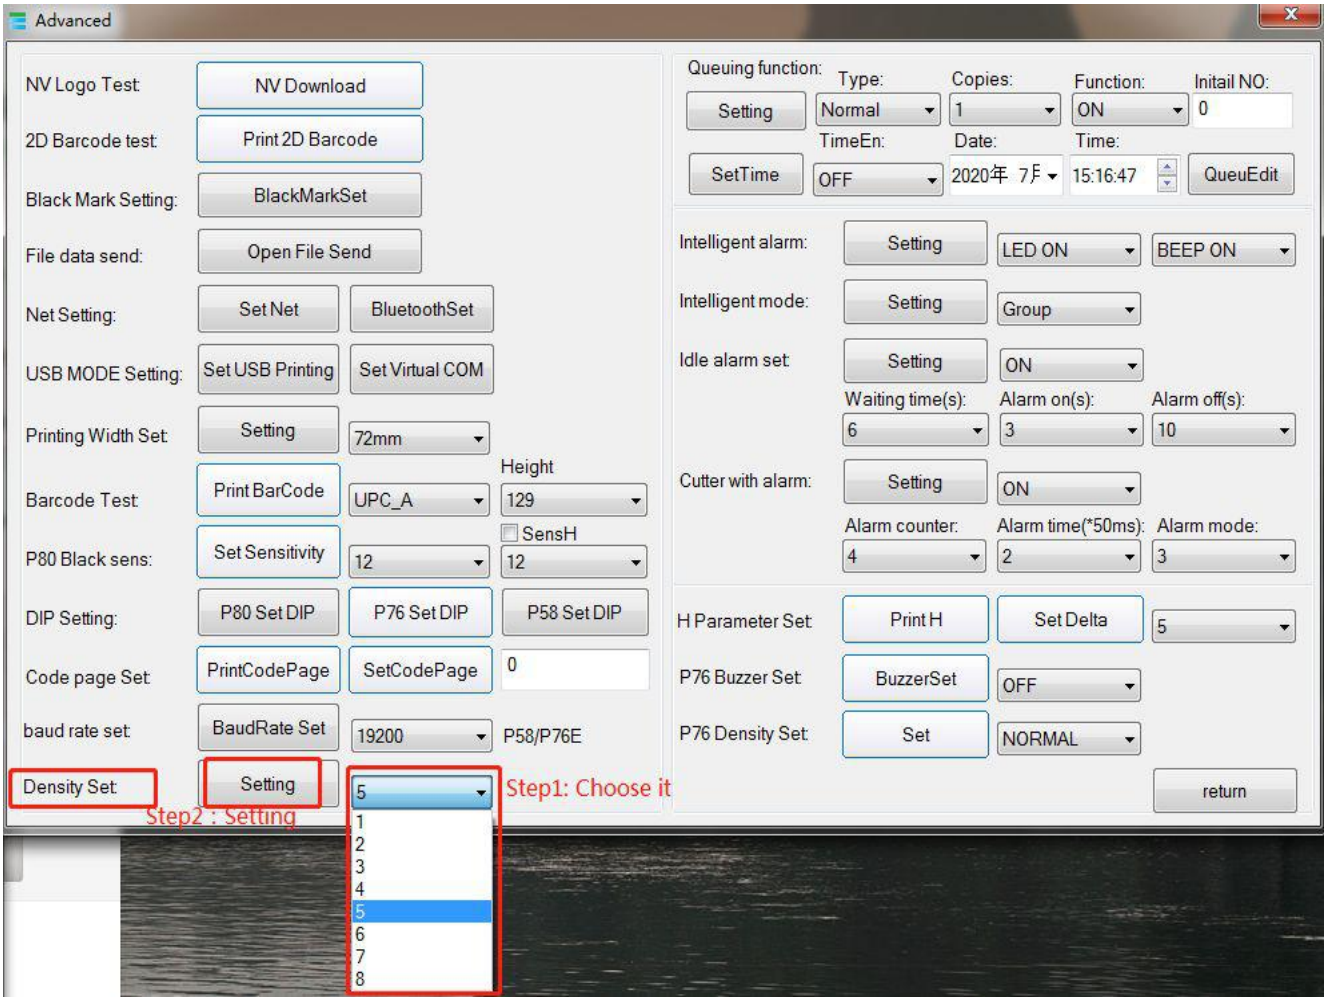

4. In the "Advanced" interface, find the "Density Settings" item, adjust its value to 6 or 7, and click the Settings button next to it.

Note： Don't adjust too much, generally a value of 5 is the most appropriate. Too high a value will reduce the life of the print head